


ATOMOS WALL LIGHT INSTALLATION INSTRUCTIONS 1 OF 5

BARONCELLI ⌘

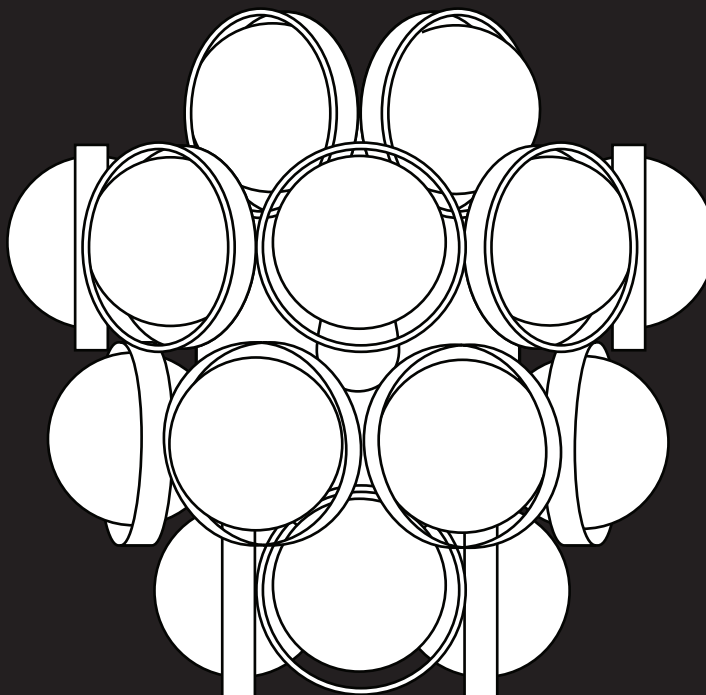

WHAT IS INCLUDED

1. Wall fitting
2. Glass

WHAT YOU WILL NEED

1. Screws
2. Bulbs - E14 (240v) / E12 (120v) - GOLF - Max 60W
3. Screwdriver (3.5mm / 1/8" flat tip) + pliers
4. Soft cloth
5. Allen Keys

WEIGHT


1 Light 4 kg (9 lb)

ATOMOS WALL LIGHT


INSTALLATION INSTRUCTIONS

2 OF 5

BARONCELLI ⌘

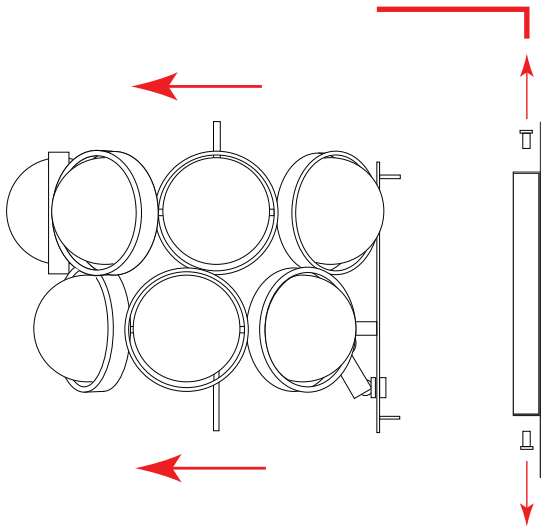


STEP 1
Remove the case cover from the frame.

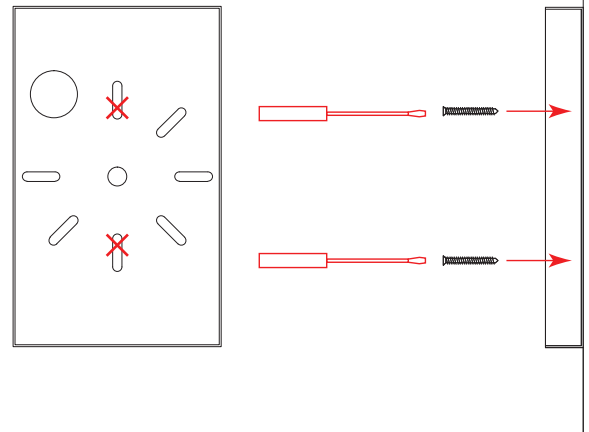

STEP 2
Fix wall plate to wall surface. Fixing should be suitable to hold the required weight.
Pass cable through central hole for the electrical connection.


NOTE: SCREWS ARE NOT SUPPLIED

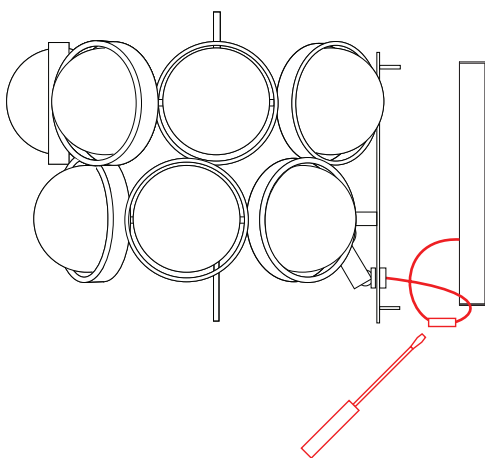

ENSURE ANY ELECTRICAL WORK IS CARRIED OUT BY A QUALIFIED ELECTRICIAN

STEP 3
Make electrical connection.

MURANO | NEW YORK | LONDON
BARONCELLI.COM

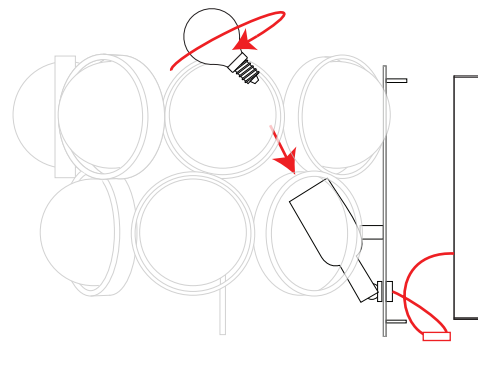

NOTE: 120V REQUIRE E12 AND 240V REQUIRE E14 (MAX 60W)


STEP 4
Insert bulb and connect to test electrics.

ATOMOS WALL LIGHT


INSTALLATION INSTRUCTIONS

3 OF 5

BARONCELLI 

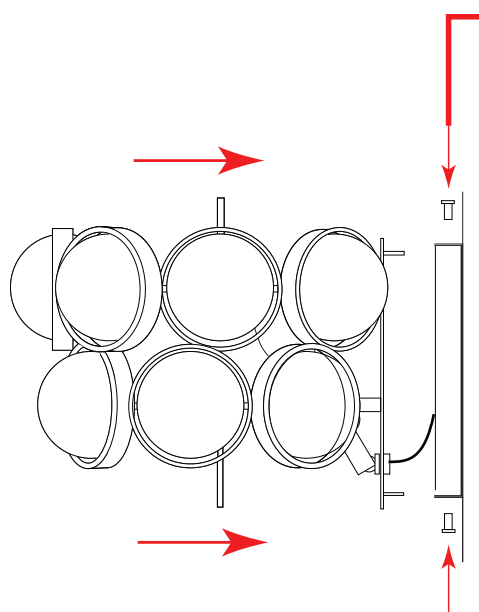

STEP 5
Replace cover plate, secure using side screws.

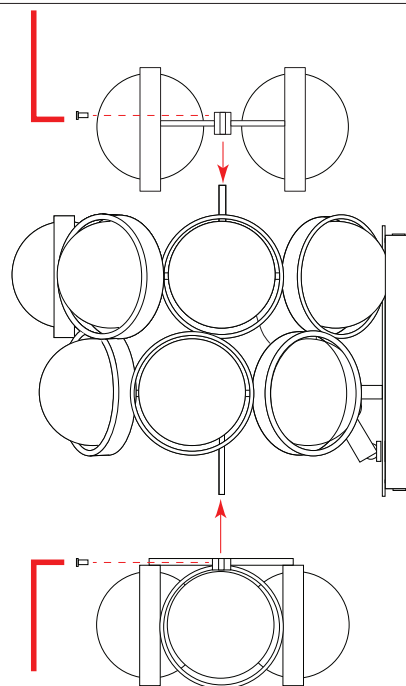


STEP 6
Attach the top and bottom elements to the frame.
Secure in place using side screws.

ENSURE ANY ELECTRICAL WORK IS CARRIED OUT BY A QUALIFIED ELECTRICIAN

OPERATION AND MAINTENANCE


4 OF 5

BARONCELLI 

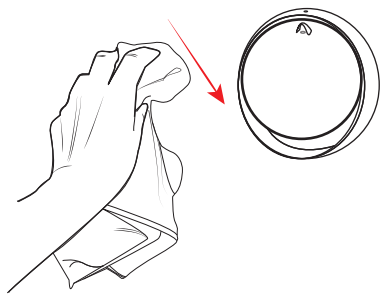


GLASS CLEANING

Glass elements should be carefully cleaned using a soft cloth.

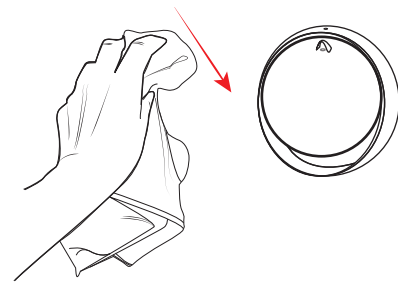

METAL CLEANING

Carefully clean metal surfaces using a soft cloth and no liquid.

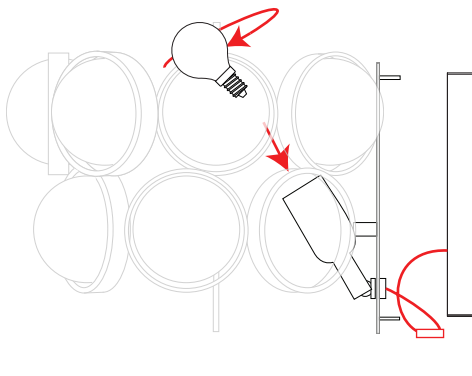

REPLACING A BULB


Ensure electricals are switched off and bulb has cooled down. Unscrew bulb and replace. Remove glass if required to access.

ENSURE ANY ELECTRICAL WORK IS CARRIED OUT BY A QUALIFIED ELECTRICIAN


OPERATION AND MAINTENANCE

5 OF 5


BARONCELLI

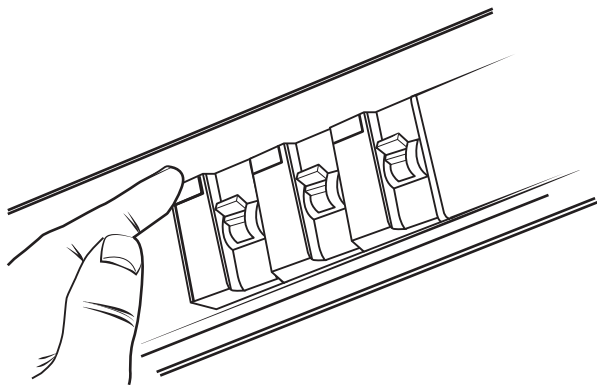


STEP A
TROUBLE SHOOTING - ELECTRICAL FAULTS
Check fuseboard

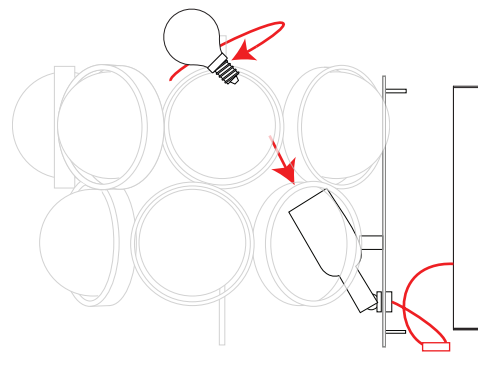

STEP B
TROUBLE SHOOTING - ELECTRICAL FAULTS
Check and replace the bulbs.

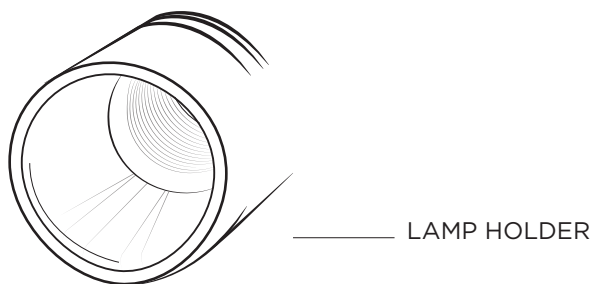

STEP C
TROUBLE SHOOTING - ELECTRICAL FAULTS
Check/test lamp holder.

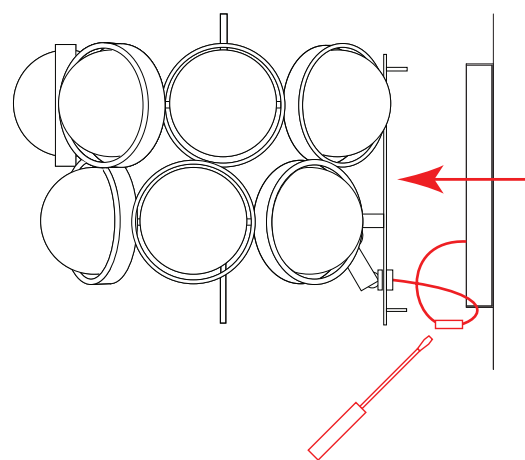

STEP D
TROUBLE SHOOTING - ELECTRICAL FAULTS
Retrace back to step 6 for removal of elements.
Remove fascia plate. Check/test connections.