


# MATTEO WALL LIGHT

## INSTALLATION INSTRUCTIONS

### 1 OF 4

BARONCELLI ⌘

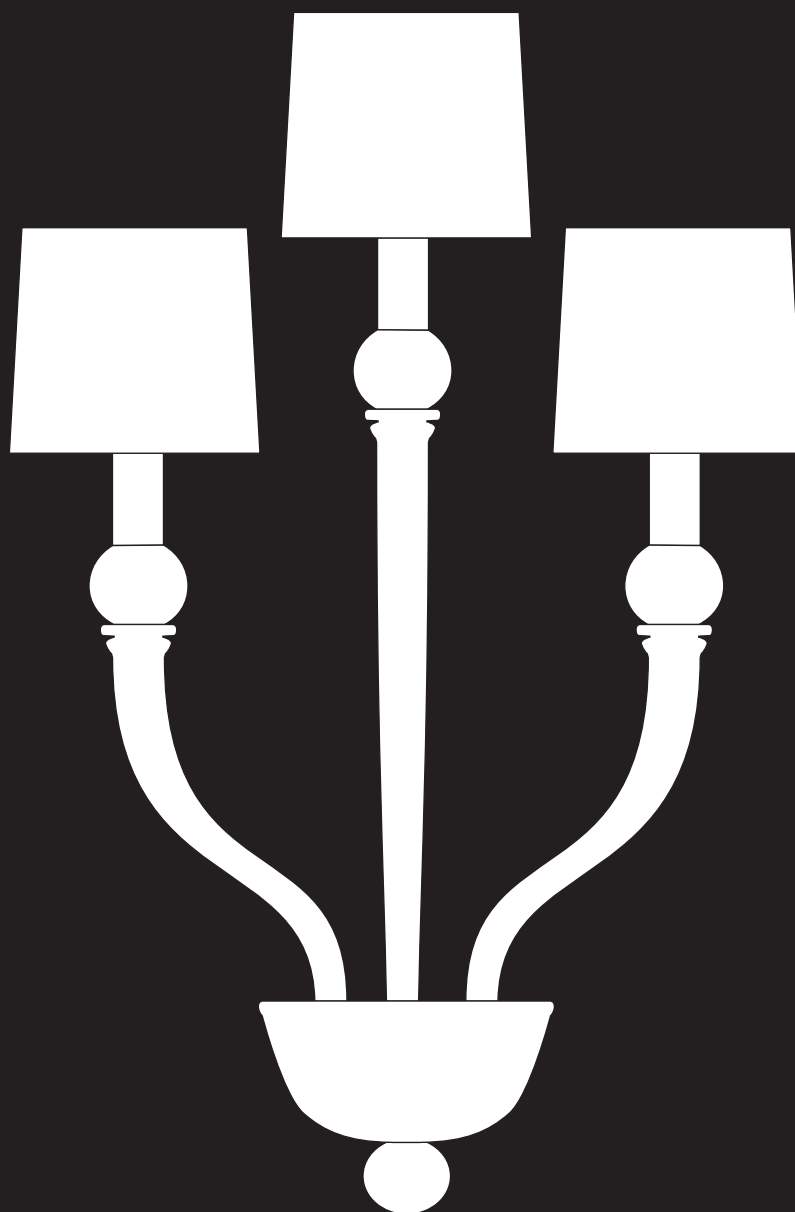

#### WHAT IS INCLUDED

1. Wall fitting

#### WEIGHTS

- 2 LIGHTS 4kg (9LB)
- 3 LIGHTS 5kg (12LB)

#### WHAT YOU WILL NEED


1. Screws
2. Bulbs - E14 (240v) / E12 (120v) - Max 40W
3. Screwdriver (3.5mm / 1/8" flat tip) + pliers
4. Soft cloth

# MATTEO WALL LIGHT

## INSTALLATION INSTRUCTIONS

### 2 OF 4


BARONCELLI ⌘

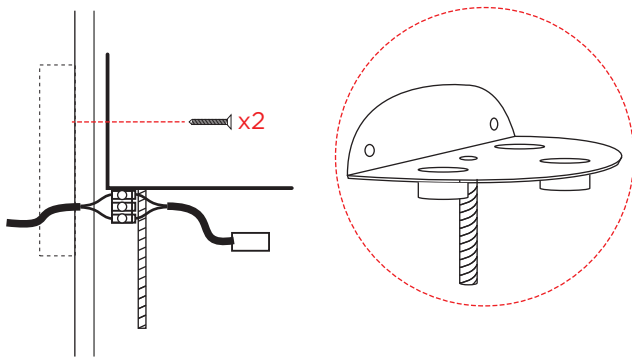

#### STEP 1 (U.S)

Mount the wall fitting to the junction box. Ensure junction box is capable of taking the relevant weight. Please refer to the front cover sheet for weights.


NOTE: SCREW FIXINGS ARE NOT SUPPLIED

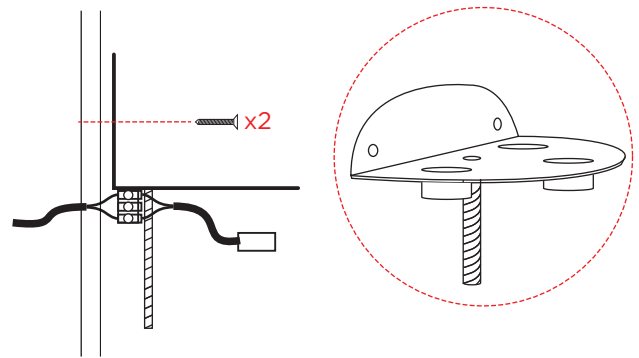

#### STEP 1


Mount the wall fitting into a suitably secure surface. Please refer to the front cover sheet for weights.

NOTE: SCREW FIXINGS ARE NOT SUPPLIED

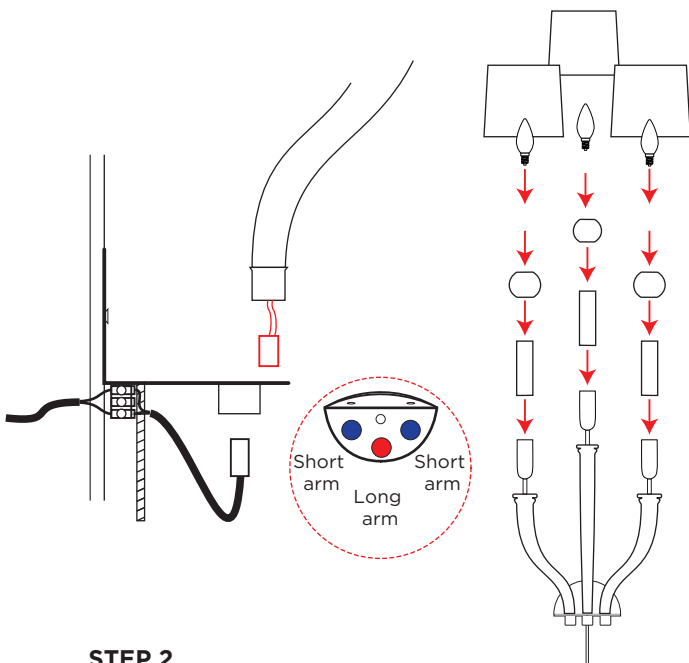

#### STEP 2

Insert arms, candle sieves and glass elements. Make electrical connection and test the light.

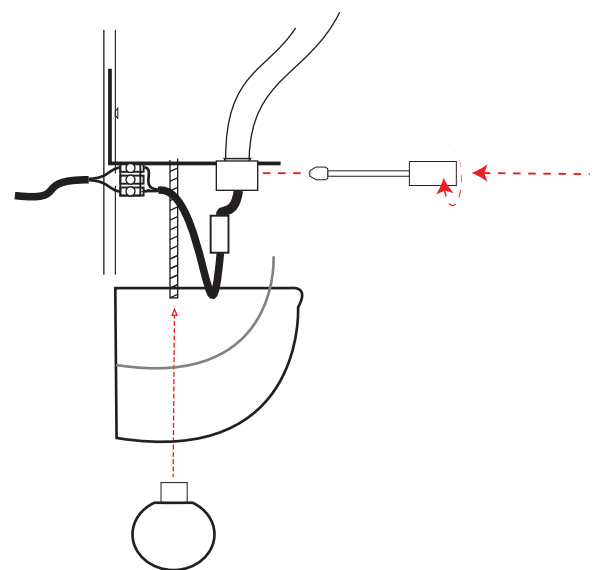

#### STEP 3


Secure arms with side screw. Raise fondino and metal liner. Secure in place using finial.

\*ENSURE ANY ELECTRICAL WORK IS CARRIED OUT BY A QUALIFIED ELECTRICIAN\*

# OPERATION AND MAINTENANCE


## 3 OF 4

BARONCELLI 

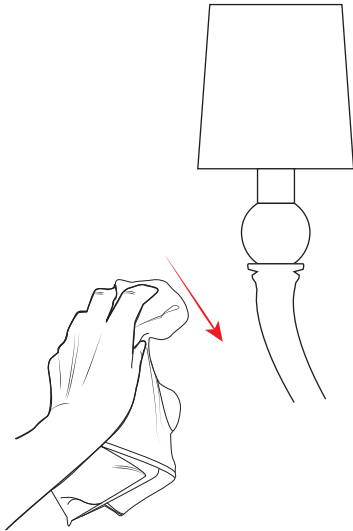


### GLASS CLEANING

Glass elements should be carefully cleaned using a soft cloth.

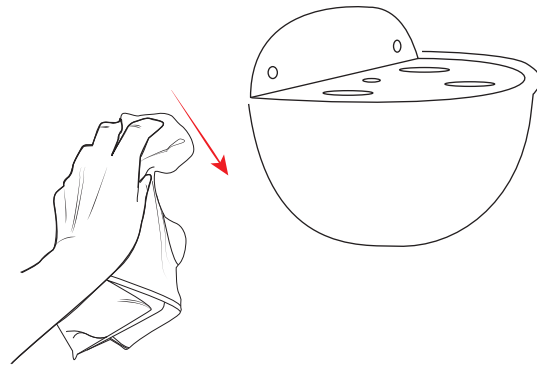


### METAL CLEANING

Carefully clean metal surfaces using a soft cloth and no liquid.

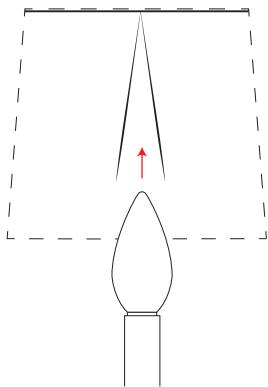

### REPLACING A BULB

If shade is in place, remove first, carefully lift until the clip fitting releases itself of the bulb.

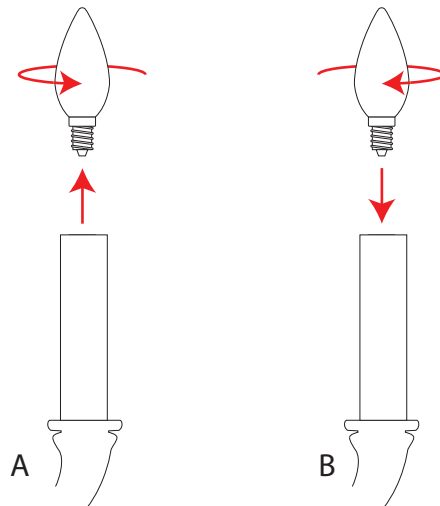

### REPLACING A BULB


Remove glass elements if bulb is obstructed. Ensure electricals are switched off and bulb has cooled down. Remove bulb and replace.

\*ENSURE ANY ELECTRICAL WORK IS CARRIED OUT BY A QUALIFIED ELECTRICIAN\*


# OPERATION AND MAINTENANCE

## 4 OF 4


# BARONCELLI

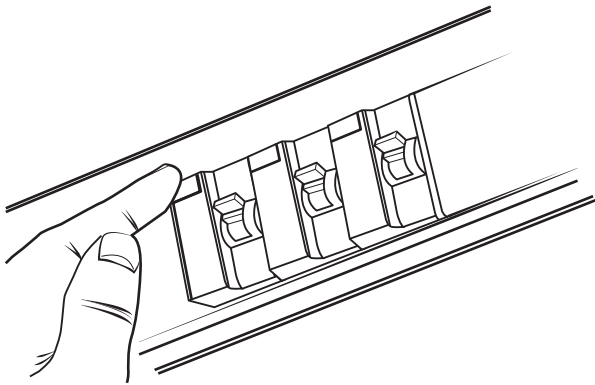


**STEP A**  
**TROUBLE SHOOTING - ELECTRICAL FAULTS**  
Check fusebaord

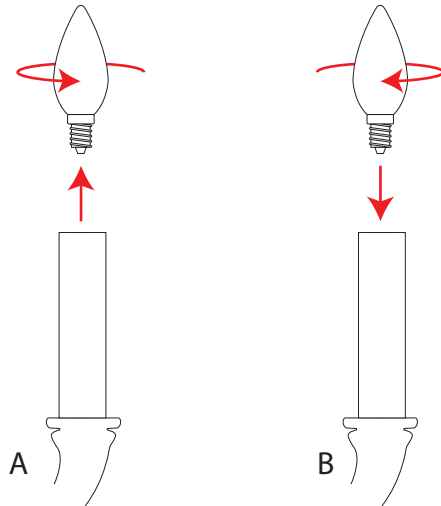

**STEP B**  
**TROUBLE SHOOTING - ELECTRICAL FAULTS**  
Check and replace the bulbs.

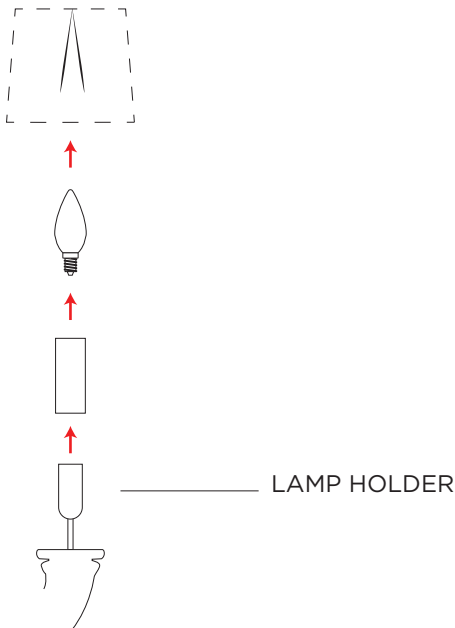

**STEP C**  
**TROUBLE SHOOTING - ELECTRICAL FAULTS**  
Check/test lamp holder. Retrace installation steps to access.

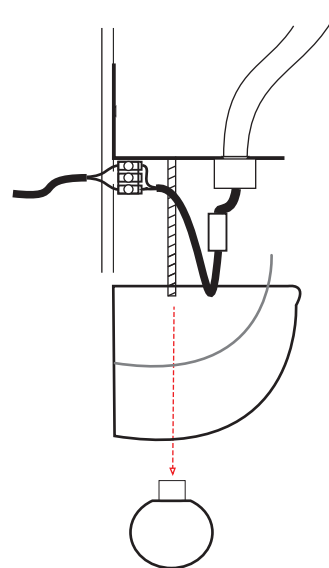

**STEP D**  
**TROUBLE SHOOTING - ELECTRICAL FAULTS**  
Check /test electrical connections between wall light and mains supply.