


HALOS WALL LIGHT

INSTALLATION INSTRUCTIONS

1 OF 5

BARONCELLI ®

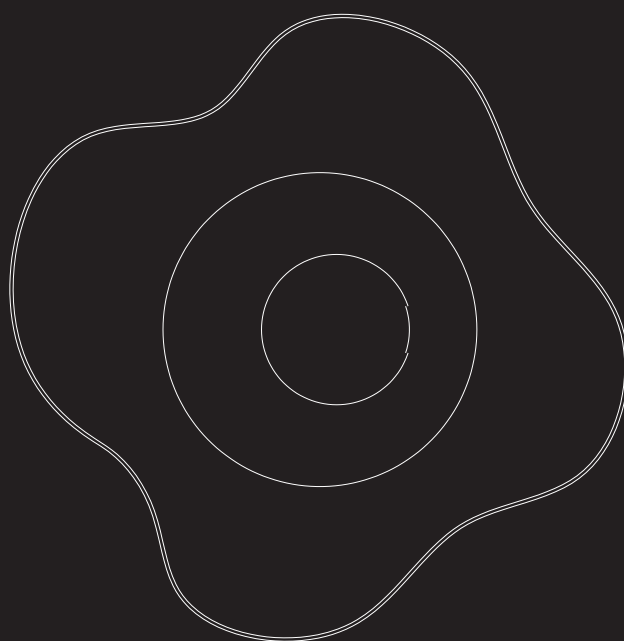

WHAT IS INCLUDED

1. Ceiling canopy
2. Suspension cables
3. LED drivers

1 Lights

WEIGHT

25kg (56lb)

WHAT YOU WILL NEED


1. Junction box fixings
2. Screwdriver (3.5mm / 1/8" flat tip) + pliers
3. Soft cloth
4. Hex Key

HALOS WALL LIGHT

INSTALLATION INSTRUCTIONS

2 OF 4


BARONCELLI ⌘

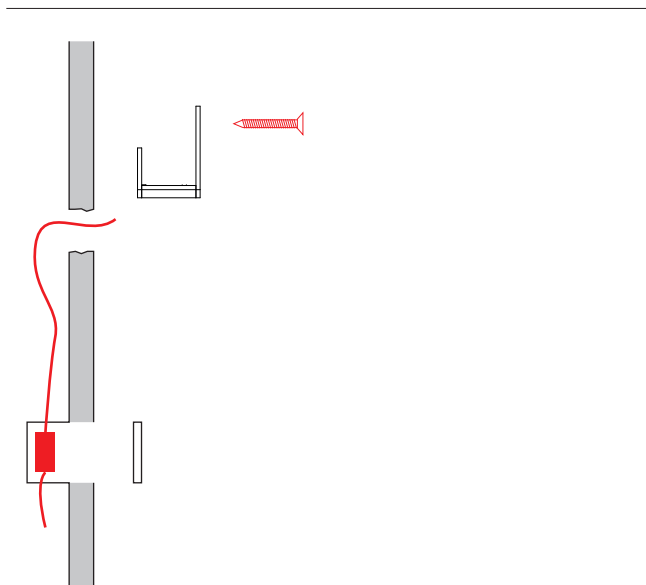

STEP 1 (Optional)

Prepare the wall.


LED driver can be stored in the recessed wall.
Connect to the main and pass electrical cable
through the feed hole.

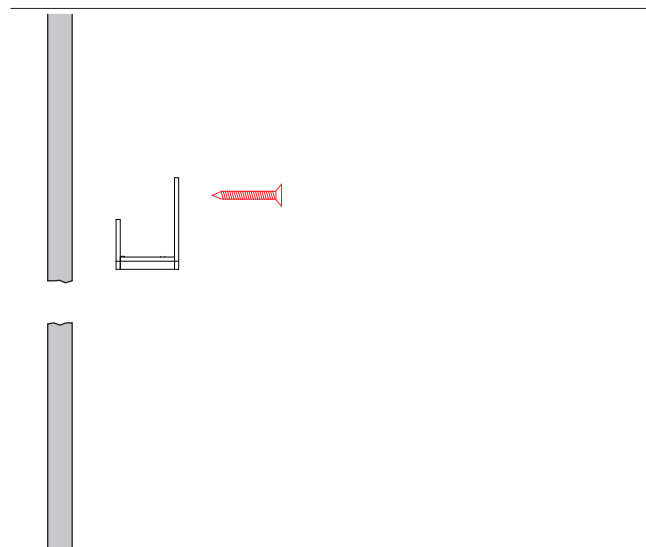

STEP 2


Secure Bracket where required into wall surface.
Ensure wall is prepared to take the weight of the
mirror. Screw is not included.

NOTE: SCREW FIXINGS ARE NOT SUPPLIED

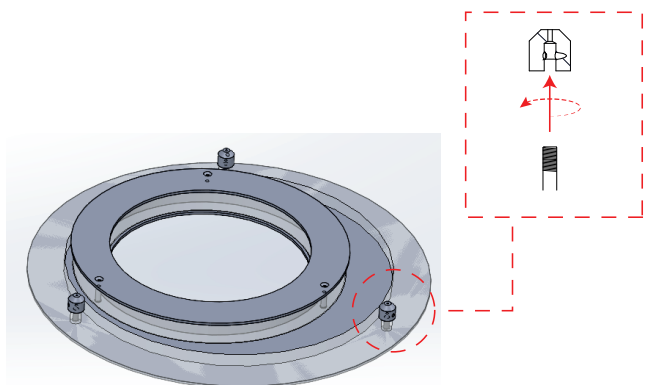

STEP 3

Remove cap from the frame.

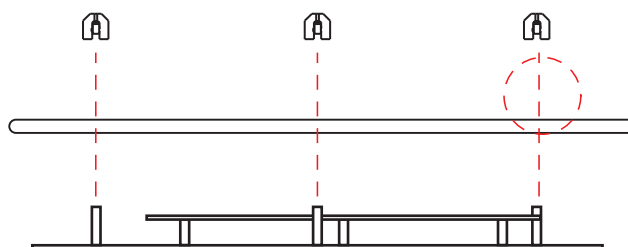

STEP 4

Mount the glass onto the frame.
Screw back the suspension cap.


NOTE: Ensure smooth side is facing bottom.

HALOS WALL LIGHT

INSTALLATION INSTRUCTIONS

3 OF 4

BARONCELLI ⌘

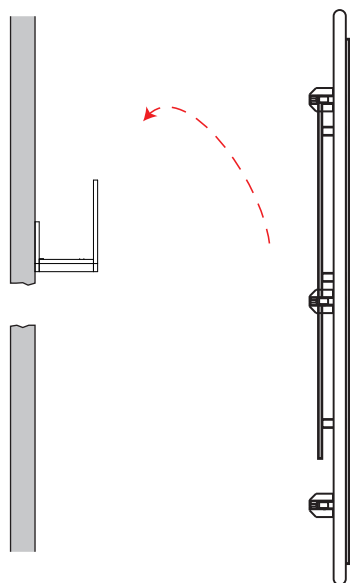


THIS STEP REQUIRES TWO PEOPLE

STEP 5

Mount the wall light.

ENSURE ANY ELECTRICAL WORK IS CARRIED OUT BY A QUALIFIED ELECTRICIAN

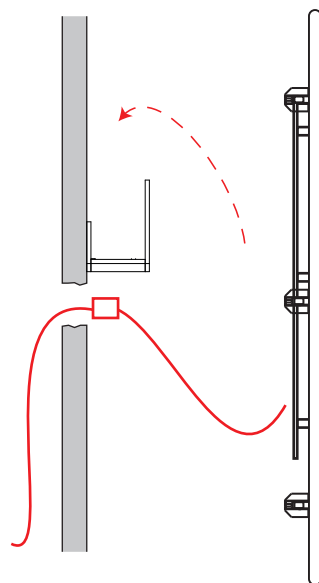

THIS STEP REQUIRES TWO PEOPLE


STEP 5 (OPTIONAL)

Make electrical connection to LED driver. Mount the wall light.

OPERATION AND MAINTENANCE


4 OF 4

BARONCELLI ⌘

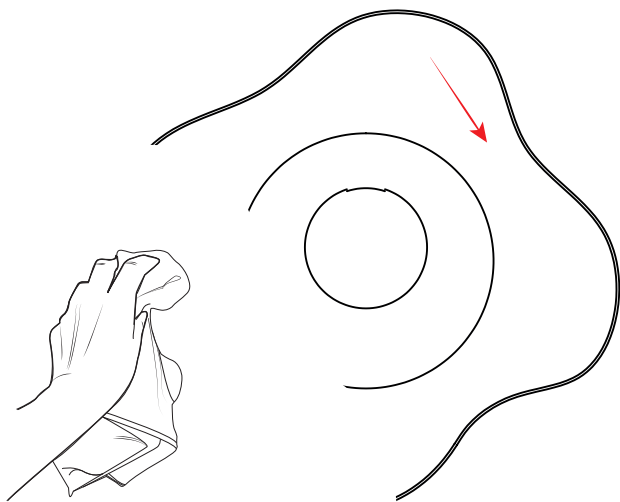


GLASS CLEANING

Glass elements should be carefully cleaned using a soft cloth.

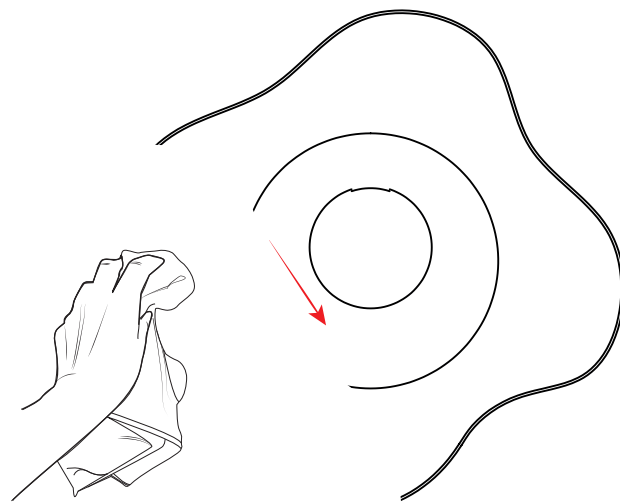


METAL CLEANING

Carefully clean metal surfaces using a soft cloth and no liquid.

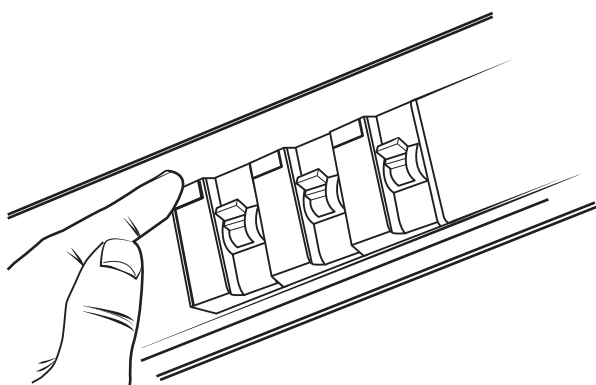

STEP A
TROUBLE SHOOTING - ELECTRICAL FAULTS
Check fusebaord

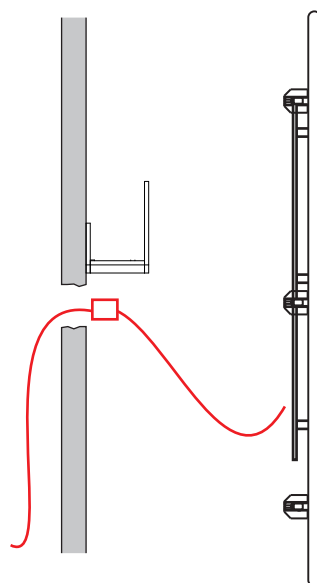

STEP B
TROUBLE SHOOTING - ELECTRICAL FAULTS
Check/test connections.