


# ARGO 1.2 PENDANT INSTALLATION INSTRUCTIONS 1 OF 2

BARONCELLI ⌘

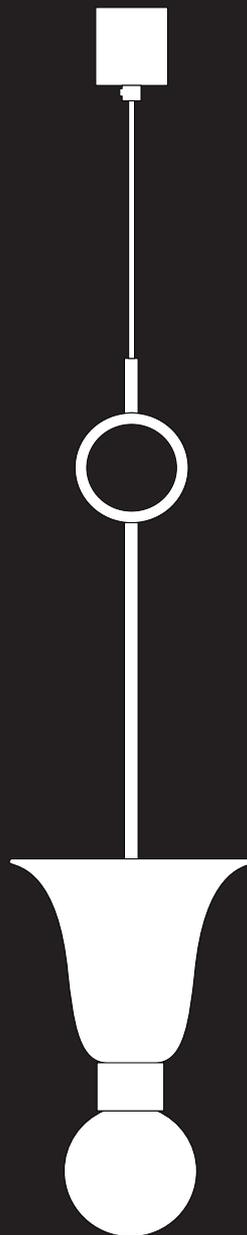

## WHAT IS INCLUDED

1. Ceiling canopy
2. Stem
3. Spares

## WHAT YOU WILL NEED

1. Hook
2. Bulbs
3. Screwdriver (3.5mm / 1/8" flat tip) + pliers
4. Soft cloth

# ARGO 1.2 PENDANT

## INSTALLATION INSTRUCTIONS

### 2 OF 2


BARONCELLI ⌘



#### STEP 1


Using a hook secured firmly into a joist, hook the assembly. Ensure hook is capable of taking a 5kg load.

NOTE: CEILING HOOK IS NOT SUPPLIED

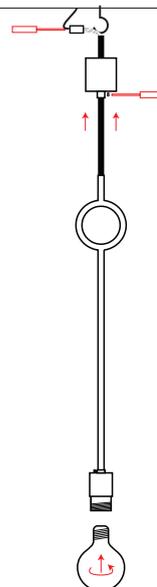


#### STEP 2

Make electrical connections before inserting and testing using a bulb. Once tested remove bulb and raise ceiling canopy securing using the grub screw beneath.

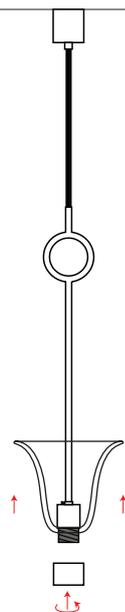

#### STEP 3

Raise the glass into position and secure beneath using the screw collar.



#### STEP 4

Insert bulb.