


ARGO 1.3 PENDANT INSTALLATION INSTRUCTIONS 1 OF 2

BARONCELLI ®

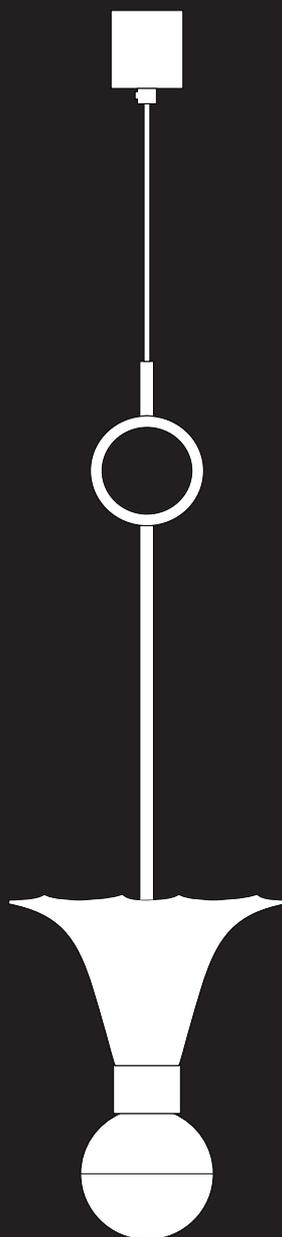

WHAT IS INCLUDED

1. Ceiling canopy
2. Stem
3. Spares

WHAT YOU WILL NEED

1. Hook
2. Bulbs
3. Screwdriver (3.5mm / 1/8" flat tip) + pliers
4. Soft cloth

ARGO 1.3 PENDANT

INSTALLATION INSTRUCTIONS

2 OF 2


BARONCELLI ⌘



STEP 1


Using a hook secured firmly into a joist, hook the assembly. Ensure hook is capable of taking a 5kg load.

NOTE: CEILING HOOK IS NOT SUPPLIED

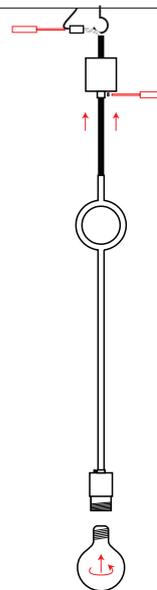


STEP 2

Make electrical connections before inserting and testing using a bulb. Once tested remove bulb and raise ceiling canopy securing using the grub screw beneath.

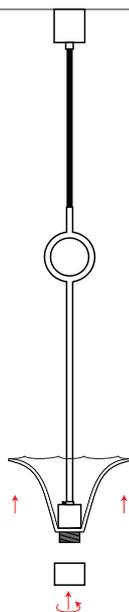

STEP 3

Raise the glass into position and secure beneath using the screw collar.

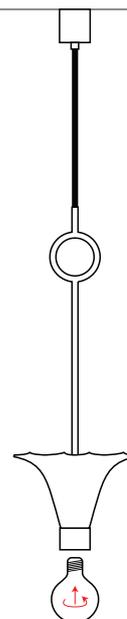

STEP 4

Insert bulb.