


# EGON CHANDELIER

## INSTALLATION INSTRUCTIONS

### 1 OF 4

BARONCELLI ⌘

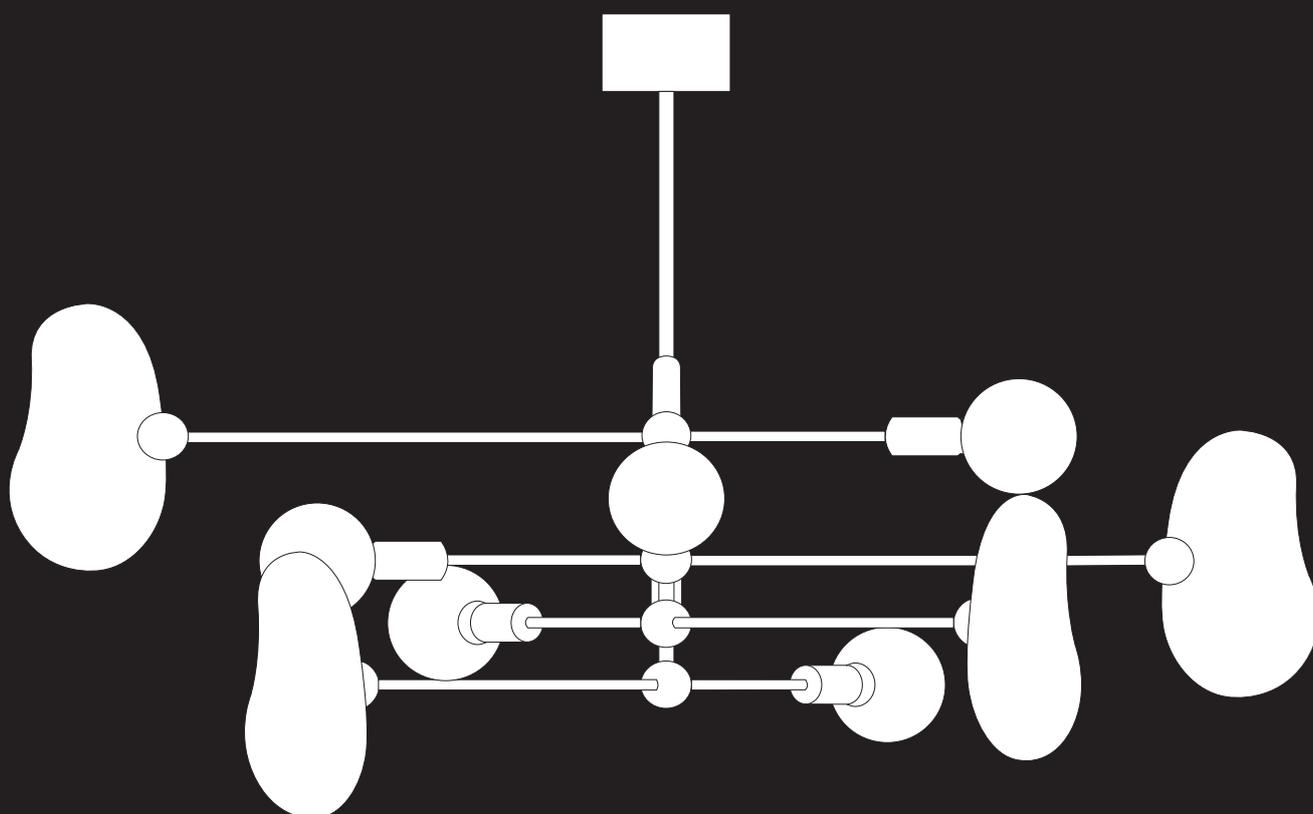

#### WHAT IS INCLUDED

1. Ceiling canopy
2. Stem
3. Spares
4. Y Bracket

#### WHAT YOU WILL NEED


1. Ceiling fixings / Junction box fixings
2. Bulbs - 5 x E27 - 125mm globe (240v) / E26 (120v) - Max 60W
3. Screwdriver (3.5mm / 1/8" flat tip) + pliers
4. Soft cloth

# EGON CHANDELIER

## INSTALLATION INSTRUCTIONS

### 2 OF 4


BARONCELLI 

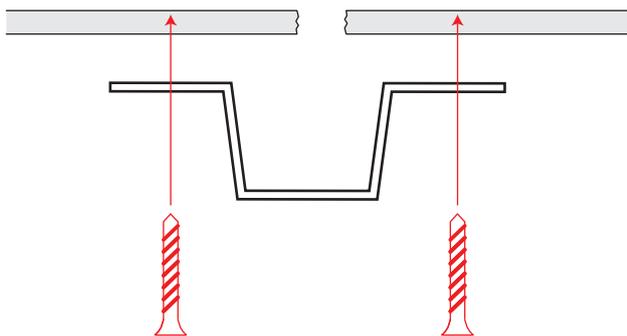

#### STEP 1

Secure Y bracket to a beam of joist. Ensure beam/joist is capable of taking a 18kg weight.


NOTE: SCREW FIXINGS ARE NOT SUPPLIED.

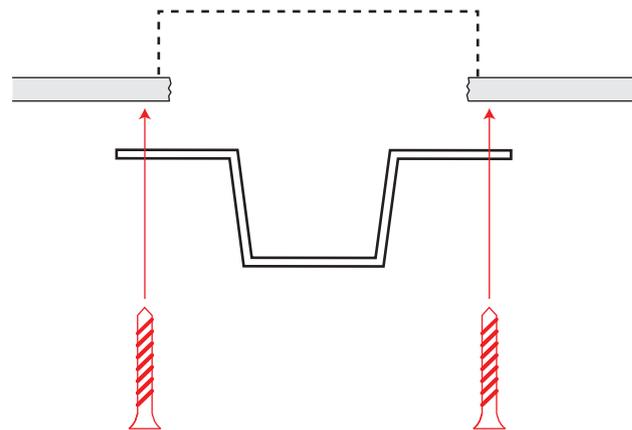

#### STEP 2 U.S


Secure Y bracket to a junction box. Ensure junction box is capable of taking 40 lb in weight.

NOTE: SCREW FIXINGS ARE NOT SUPPLIED.

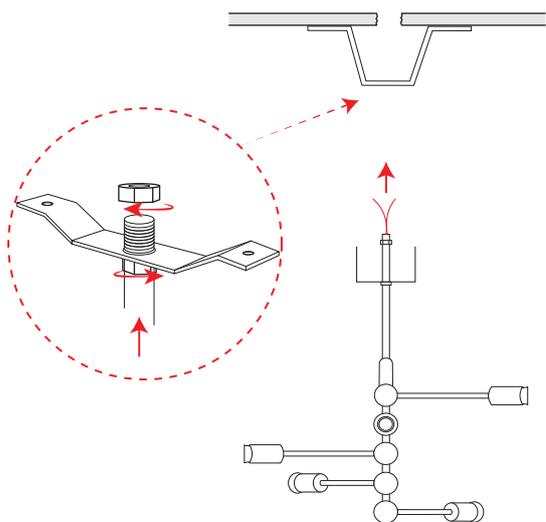

#### STEP 3

Slide central stem to the Y bracket. Pass the central stem through the hole in the Y bracket. Secure above and below Y bracket using hex nuts.

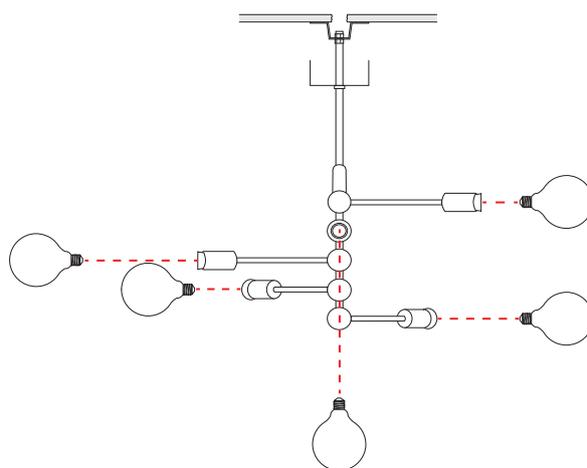

#### STEP 4


Make electrical connections, insert bulbs and test electrics.

# EGON CHANDELIER


## INSTALLATION INSTRUCTIONS

### 3 OF 4

BARONCELLI 

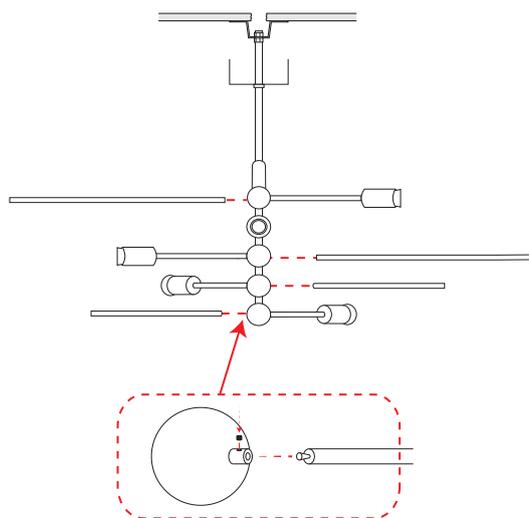

**STEP 5**  
Attach arms to the stem. Secure with grub screws.

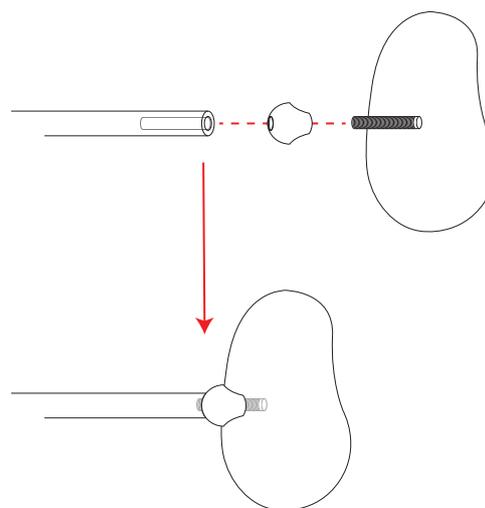


**STEP 6**  
Screw the glass onto the arm. Ensure the ball fixing is placed inbetween the glass element and arm. See appendix for order.

# EGON CHANDELIER

## INSTALLATION INSTRUCTIONS


### 4 OF 4

BARONCELLI 

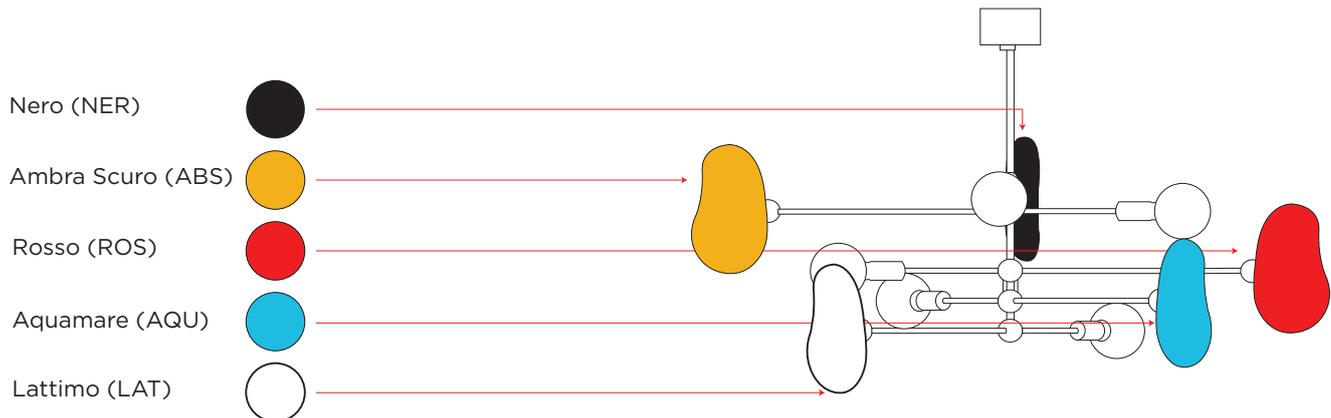

#### APPENDIX

Fix the coloured pendants in accordance to the diagram above. Adjust the orientation using the grubs screws attached in the stem.

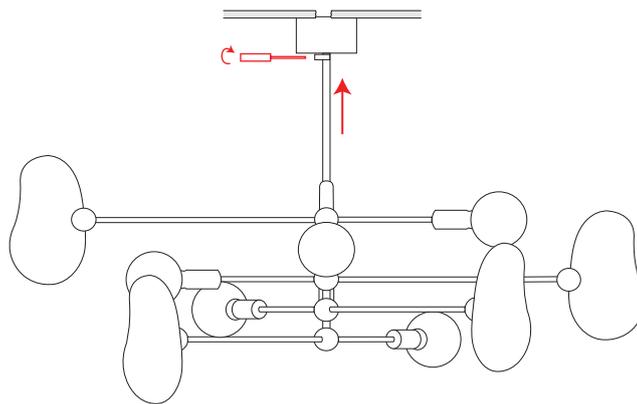

#### STEP 7

Raise the ceiling canopy using side screws.