


FOLIO WALL LIGHT

INSTALLATION INSTRUCTIONS

1 OF 7

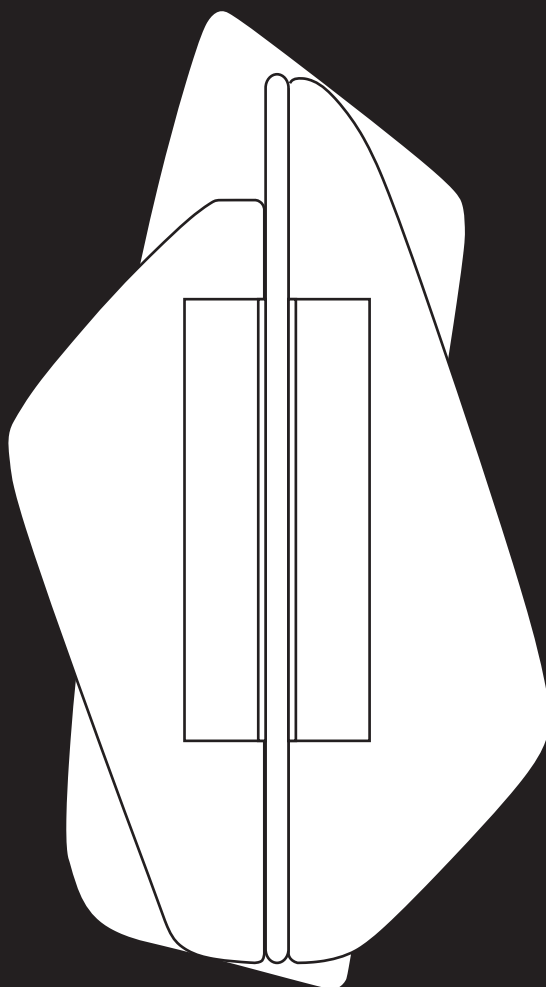

WHAT IS INCLUDED

1. Wall fitting
2. Glass
3. Long allen key

WHAT YOU WILL NEED

1. Screws
2. Screwdriver (3.5mm / 1/8" flat tip) + pliers
3. Soft cloth
4. Allen Key

WEIGHT


LED 10KG (22lb)

FOLIO WALL LIGHT

INSTALLATION INSTRUCTIONS


2 OF 7

BARONCELLI 

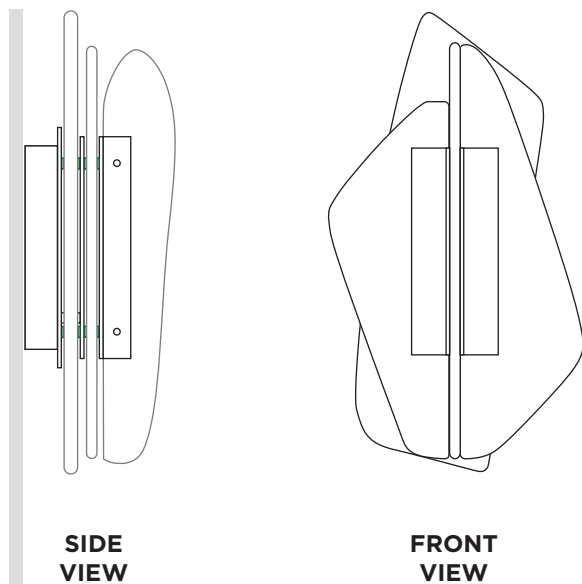


STEP 1

Ensure the final appearance of the wall light is as the same as shown on the diagram. Each glass elements have smooth / textured surface. Smooth side always faces away from the wall (see also STEP 3 - STEP5).

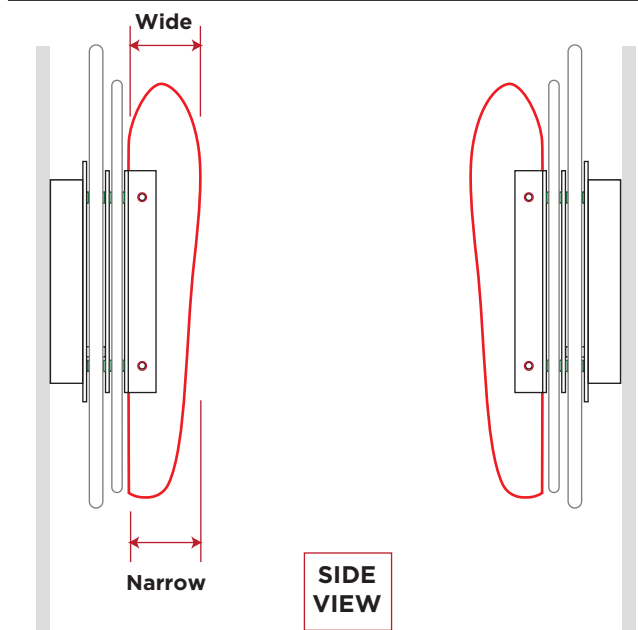

GLASS A

Glass A has 2 different sets. Make sure smooth (surface) side faces entrance foyer when assembled (See also STEP 2).

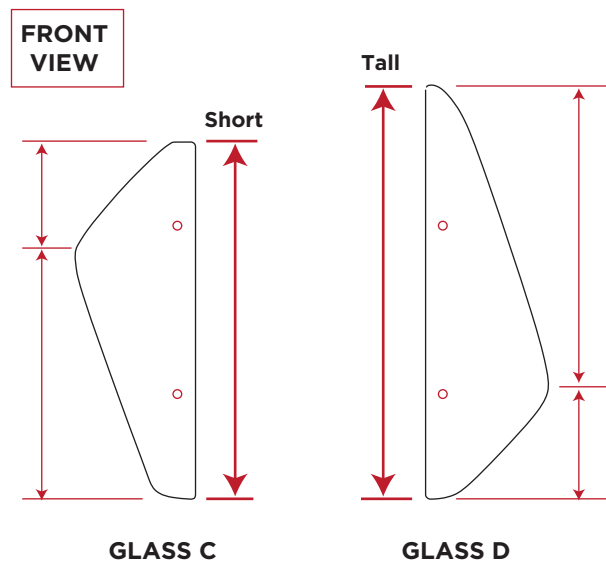


GLASS C

GLASS D

GLASS C & D

Each glass elements have smooth / textured surface. Ensure smooth side faces away from the wall. (see also STEP3)

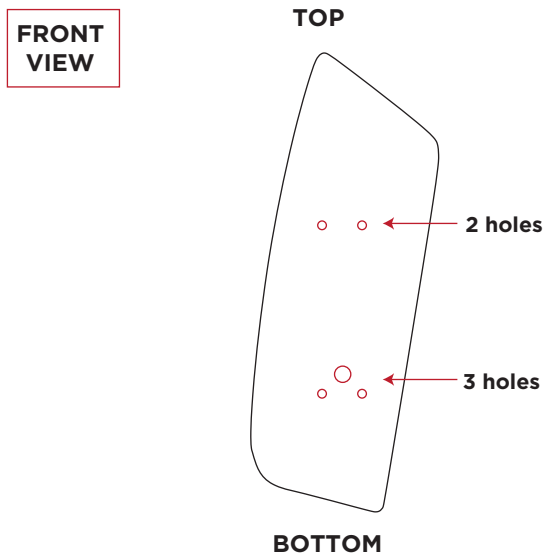

GLASS B


Glass B has smooth / textured surface. Ensure smooth side faces away from the wall. (see also STEP5)

FOLIO WALL LIGHT

INSTALLATION INSTRUCTIONS

3 OF 7


BARONCELLI ⌘

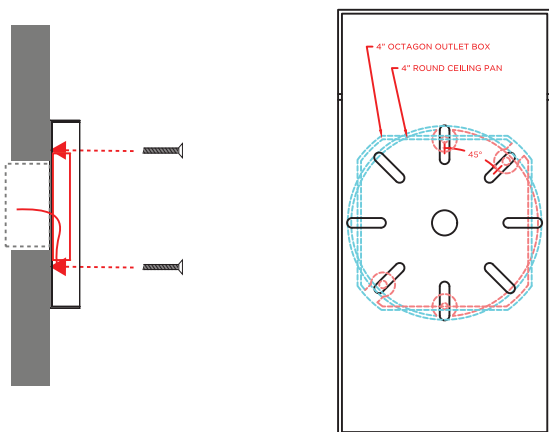

STEP 2

Secure the wall bracket to wall / junction box.
Wall must be capable of taking the relevant load.


NOTE: SCREW FIXINGS ARE NOT SUPPLIED

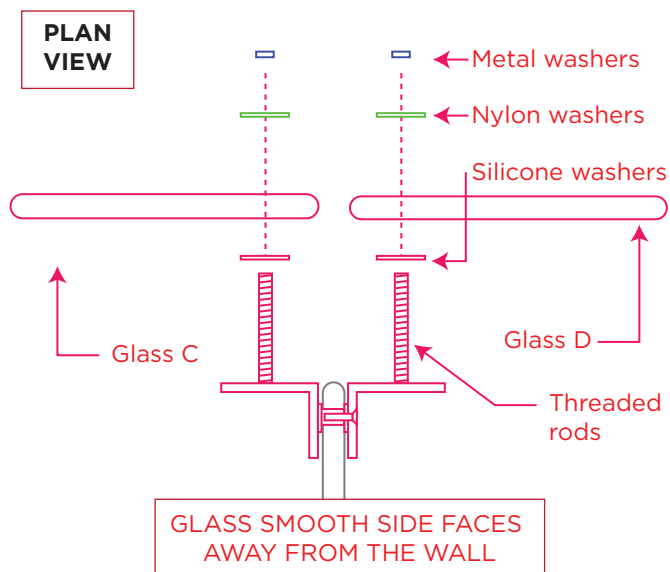

STEP 4

Pass the threaded rods through glass C and D.
Ensure silicone washers are used between glass and the frame. Secure using Nylon and Metal washers.

See P.4 for the assembly overview

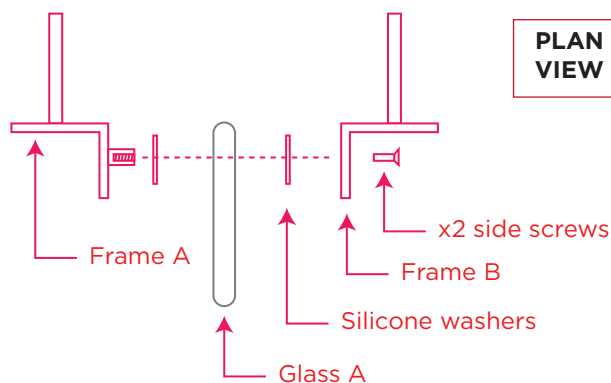


GLASS SMOOTH SIDE FACES
ENTRANCE FOYER

STEP 3

Pass the front bracket frame through Glass A and
secure using 2 x side screws.

NOTE: USE SILICONE WASHERS BETWEEN GLASS

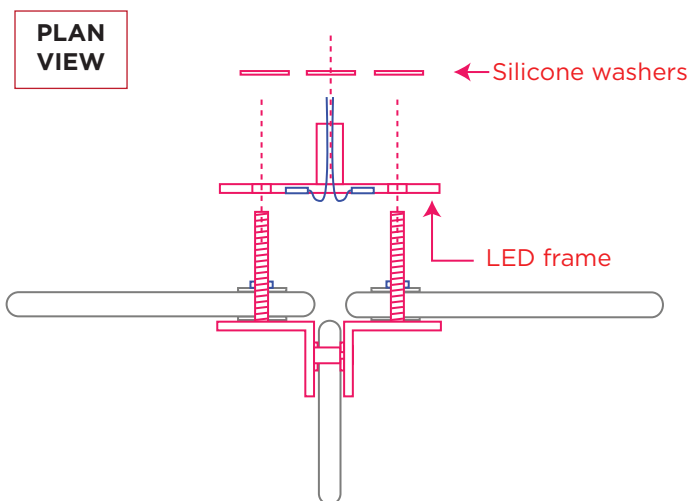

STEP 5


Attach LED frame and pass threaded rods and tube
through silicone washers.

FOLIO WALL LIGHT

INSTALLATION INSTRUCTIONS


4 OF 7

BARONCELLI ⌘

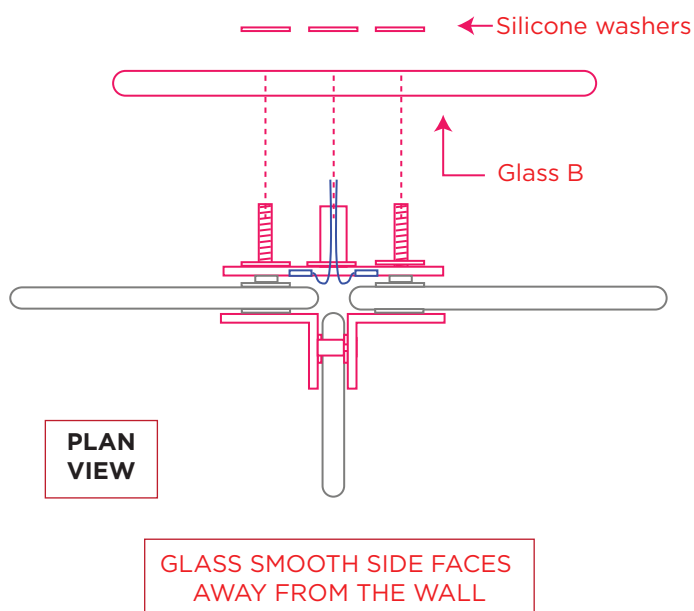


STEP 6

Pass the threaded rods and threaded tube through glass B. Ensure silicone washers are used between glass and the frame.

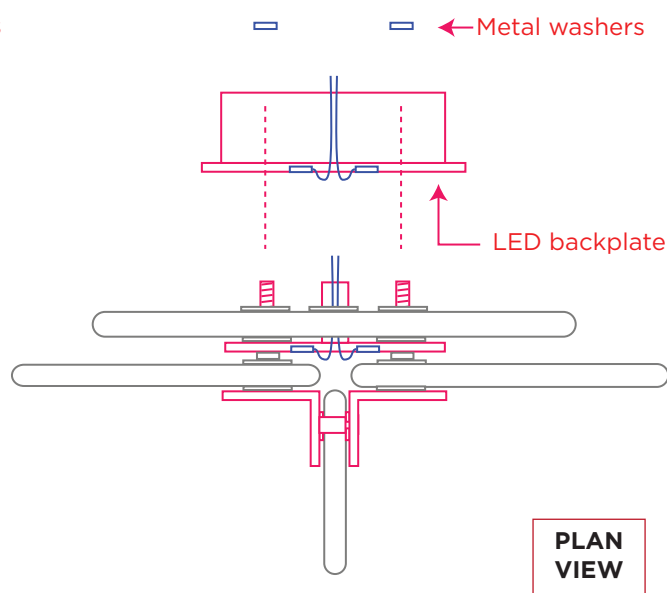


STEP 7

Pass the threaded rods and threaded tube through LED back plate. Ensure silicone washers are used between glass and the frame. Secure threaded rod using the metal washer.

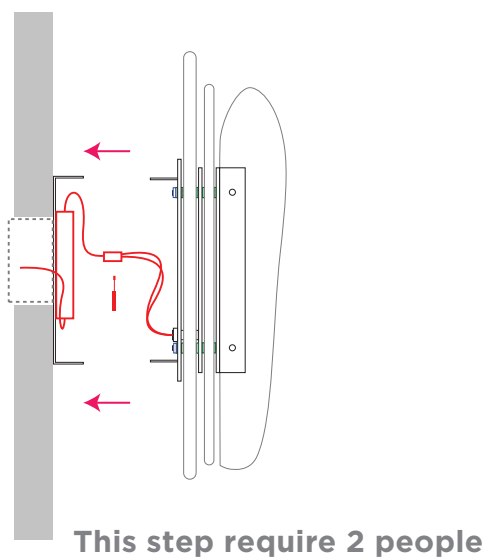

STEP 8

Make electrical connection to LED frame and LED driver. Test light.

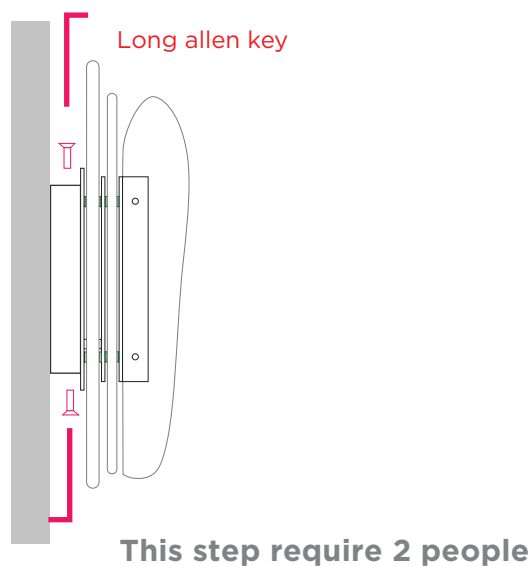

STEP 9


Secure the frame to the backplate using the long allen key.

FOLIO WALL LIGHT

INSTALLATION INSTRUCTIONS

5 OF 7


BARONCELLI 

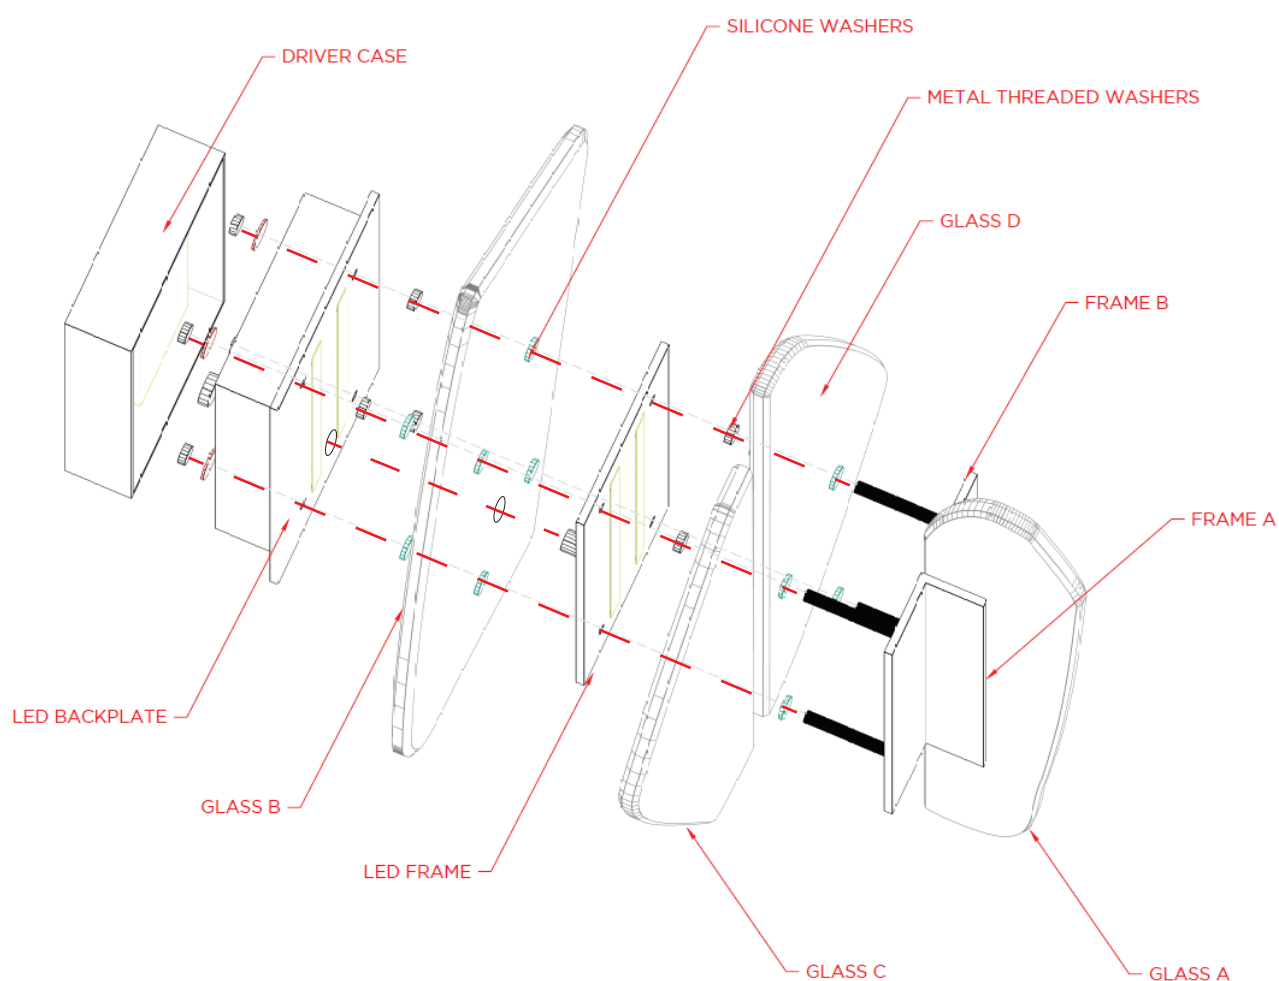

OPERATION AND MAINTENANCE


6 OF 7

BARONCELLI ⌘

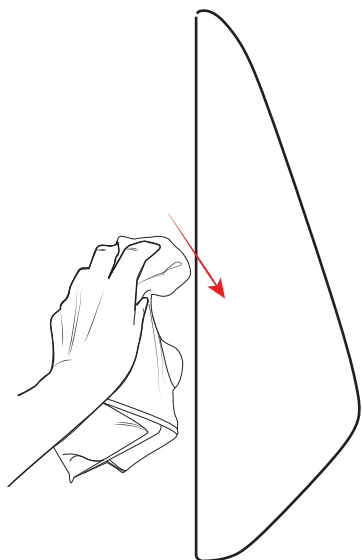


GLASS CLEANING

Glass elements should be carefully cleaned using a soft cloth.

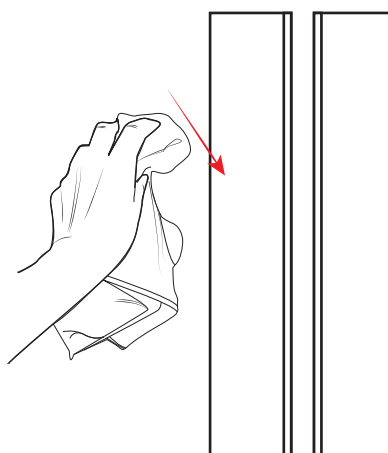


METAL CLEANING

Carefully clean metal surfaces using a soft cloth and no liquid.

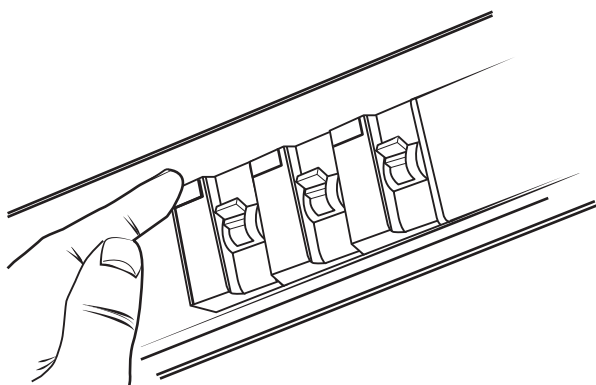

STEP A TROUBLE SHOOTING - ELECTRICAL FAULTS

Check fusebaord

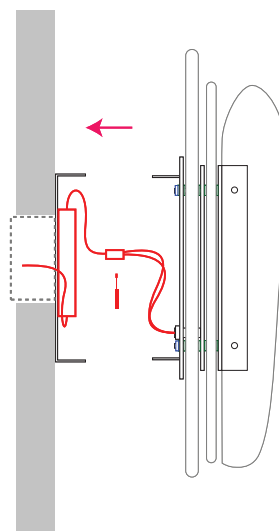


STEP C TROUBLE SHOOTING - ELECTRICAL FAULTS

Retrace installation steps to check/test connections.

OPERATION AND MAINTENANCE

7 OF 7

BARONCELLI ⌘

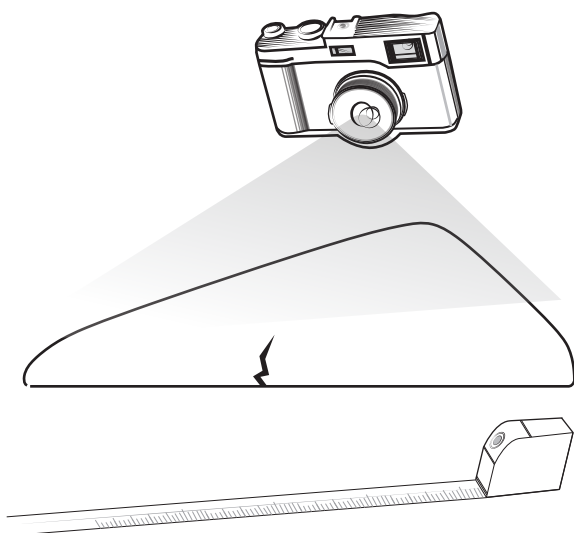

PHOTOGRAPH THE BREAKAGE

Ensure a clear side on image with a measuring tape along the breakage for scale is taken.